

Ignition Assembly Replacement for 2,000 Watt Inverter

This bulletin covers all Champion Power Equipment 2,000 watt inverter models.

Note: Read instructions completely before performing service.

1. Remove handle bolts in four corner pockets with a 10mm socket.
2. Remove Phillips head screw inside of fuel knob and remove knob.
3. Remove gas cap and then lift top panel off. It will snap off easily. Remember to replace gas cap after top panel is removed. Be sure gas cap vent is in OFF position.
4. Remove the three mounting bolts on gas tank with a 7mm socket.
5. Lift and place tank over backside of Inverter chassis. It will hang nicely without removing fuel line.
6. Locate the panel that houses the three LED lights. Remove 4 Phillips screws holding panel to front half of chassis.
7. Follow the choke cable to carburetor and loosen pinch bolt until cable can be removed by pulling choke knob through and out of the pinch bolt. (Hold cable thru nut with needle nose pliers or wrench and loose Phillips screw)
8. Check for any wire ties holding the panel assembly from pulling toward you. Removal without replacement is OK.
9. Open panel assembly and replace ignition assembly module with 2 Phillips screws.
10. Reversal of the previous procedures will complete the installation.

If you have any questions, please contact Champion Power Equipment:

Champion Power Equipment, Inc.
12039 Smith Ave.
Santa Fe Springs, CA 90670
Phone: 1-877-338-0999

Email: tech@championpowerequipment.com