



Welcome to DISH POS dashboard. In this tutorial, we will show you how to set up manually a buzzer/zoomer. First, go to General.



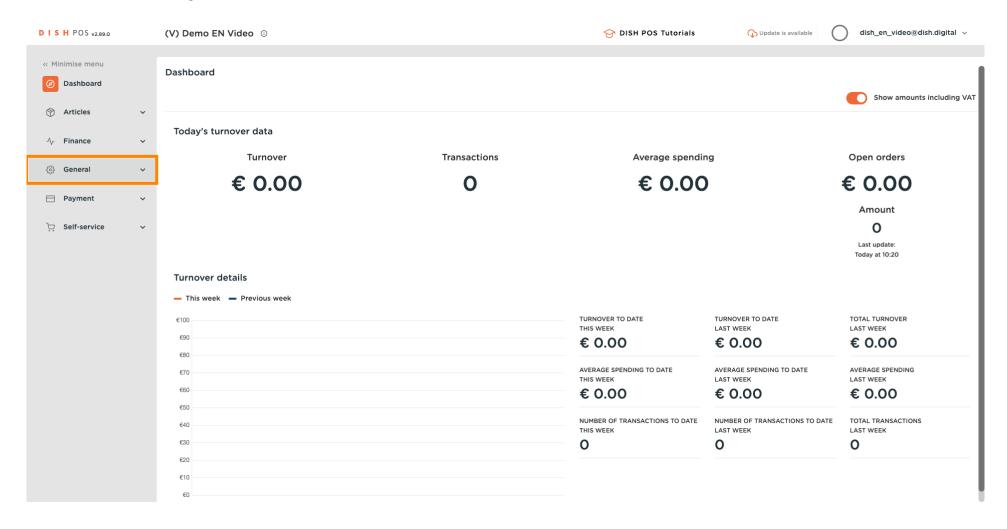


#### Click on Printers.

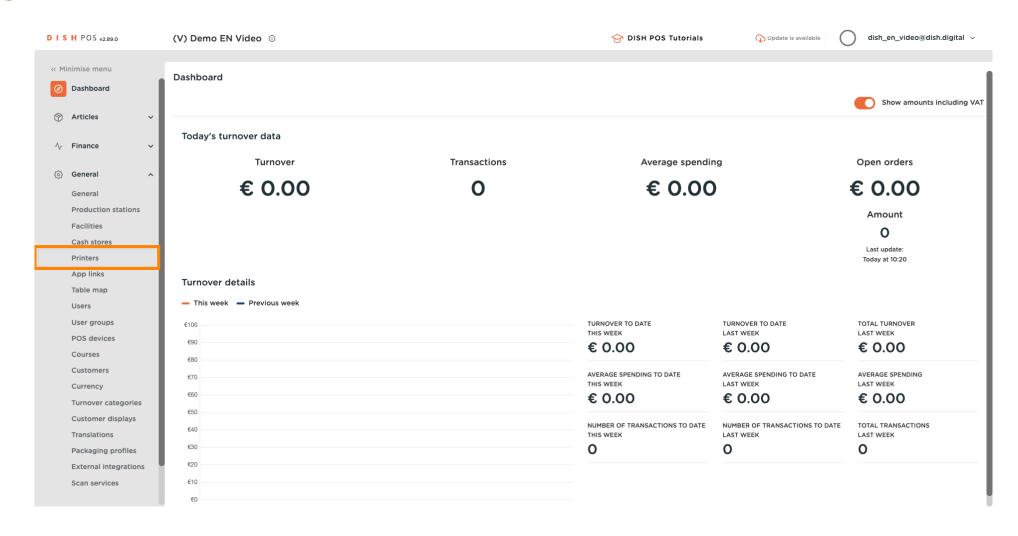





Press the pencil icon to edit your printer.

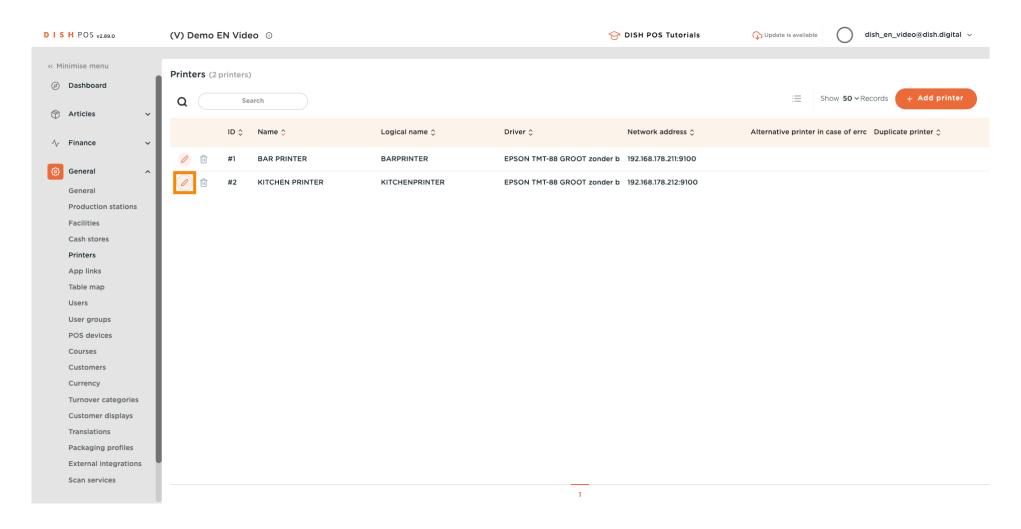




Click on the dropdown for Driver.

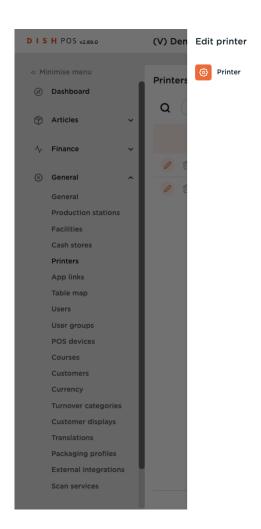


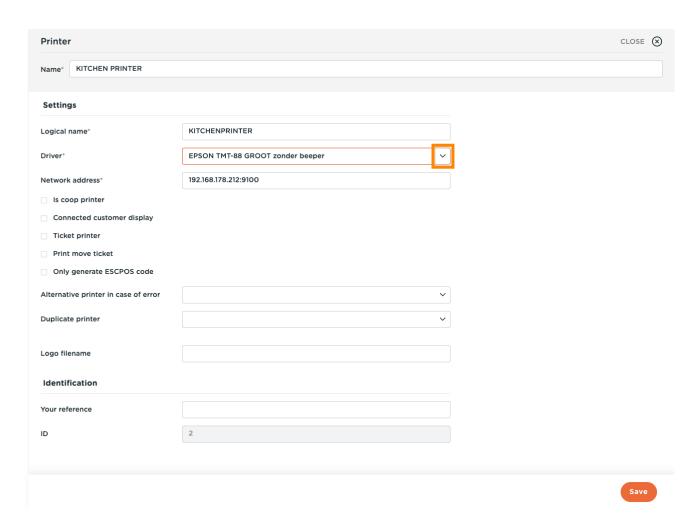




Select the EPSON TMT-88 GROOT driver. Note: The "zonder beeper" means without beeper, to prevent a cash drawer opening up when your kitchen printer is also your receipt printer.

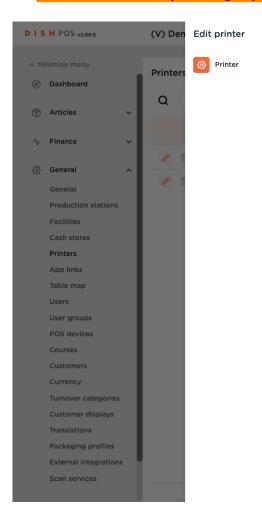

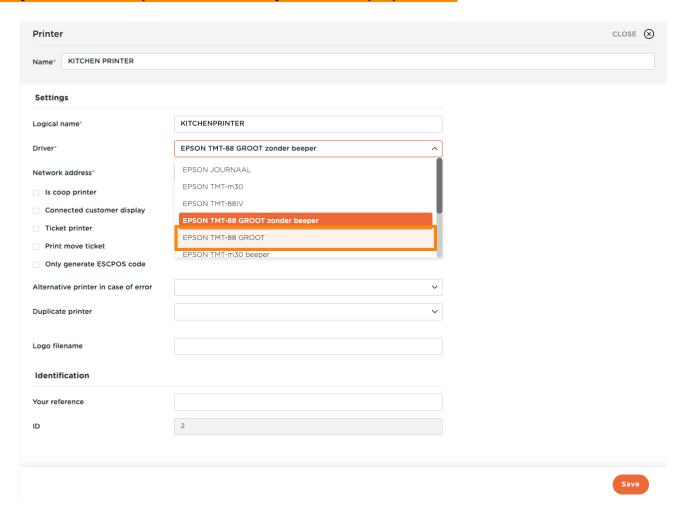




# Click on Save.

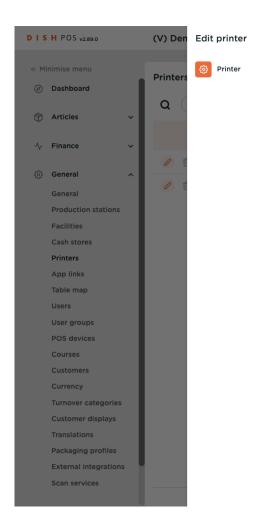

Printer		CLOSE (
Name® KITCHEN PRINTER		
Settings		
Logical name <sup>®</sup>	KITCHENPRINTER	
Driver*	EPSON TMT-88 GROOT $\vee$	
Network address*	192.168.178.212:9100	
Is coop printer		
Connected customer display		
Ticket printer		
Print move ticket		
Only generate ESCPOS code		
Alternative printer in case of error	·	
Duplicate printer	·	
Logo filename		
Identification		
Your reference		
ID	2	
		Save




To send to modifications, click on General.

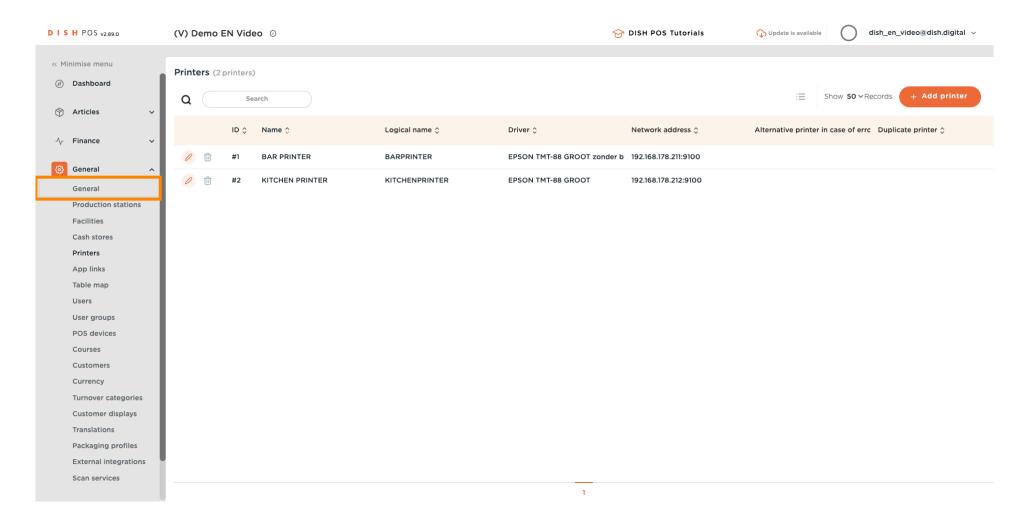




## Click on Send.

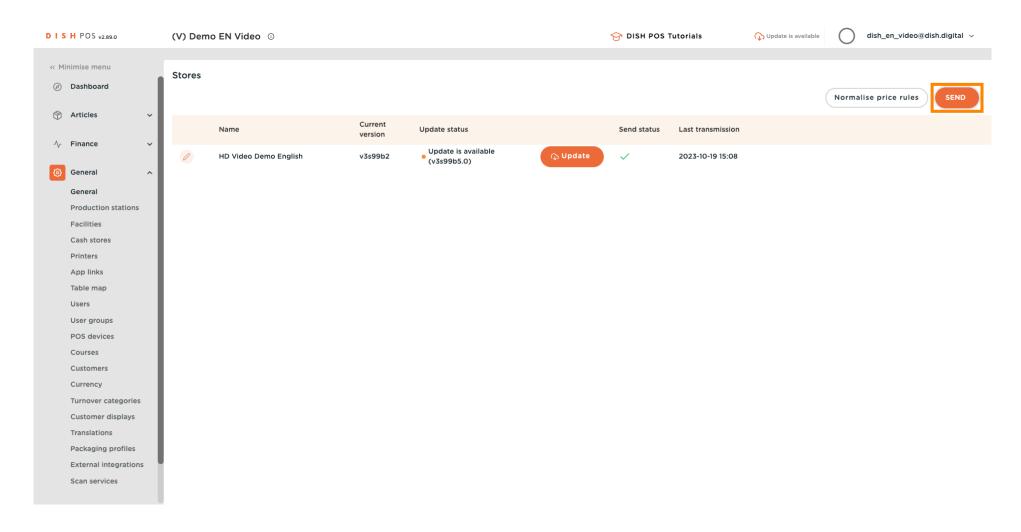



That's it. You're done.

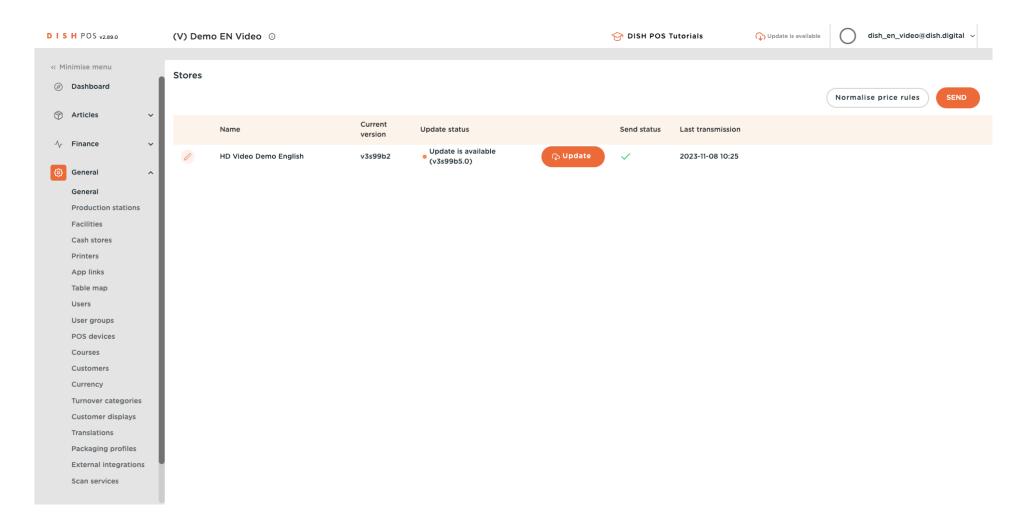





Scan to go to the interactive player