

DISH POS Lite box assembling guide

This document functions as a step-by-step guide for the Country Storage consultants on how to prepare and assemble a DISH POS Lite package and send it to the customer.

1. Required hardware and information

Hardware	DISH POS Lite packing <ul style="list-style-type: none"> • DISH POS Lite screen • Printer • USB cable • Cash drawer (optional) • Payment terminal (optional) • Installation flyer • Box for packaging • Box filler (if there is empty space)
Information	<ul style="list-style-type: none"> • Customer order • Customer address

In case the customer ordered DISH POS Lite with DISH Pay, please check if the payment terminal has arrived and check the delivery correctness of the package as well for any damages.

2. Box assembling

1. Get a DISH POS Lite screen.
2. Get a printer and add a USB cable.
3. If a cash drawer was ordered, pick a cash drawer.
4. If a payment terminal was ordered, pick the customer assigned(!) payment terminal.
5. Get an installation flyer.
6. Get a packaging box.
7. Add the DISH POS Lite screen, printer and installation flyer in the box.
 - 7.1 If a payment terminal was ordered, add the payment terminal to the box.
 - 7.2 If a cash drawer was ordered, this will be sent with the other hardware but not in the same box. This must be sent separately.
8. Add box filler so the appliances won't move within the box when transported.
9. Print the customer delivery sticker with name and address.
10. Send it all at once to the customer.