

HANDLEBAR MIRRORS QUICK START


How to correctly install your
handlebar mirrors

STEP 1


Identify if you have **bar end plugs** on your bike or a **closed grip**.

If you have a **closed grip** continue to **STEP 2**.

If you have **bar end plugs** proceed to **STEP 3**.

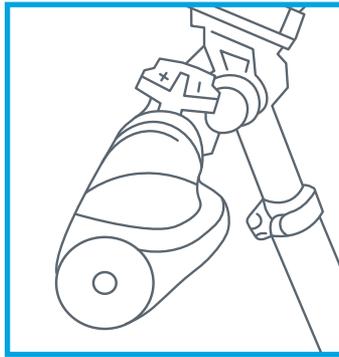

Closed grip

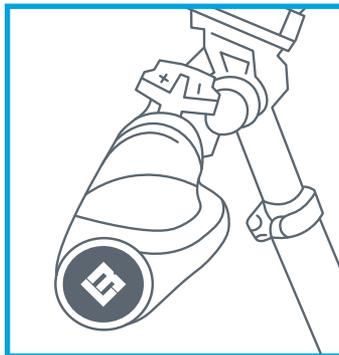


Bar end plugs

STEP 2

To begin, you will need to create a larger opening at the end of the rubber handlebar grip.


Behind your handlebar grip, your handlebars are hollow, this is where the collar of the mirror will fit into.

Use a knife to create a larger opening for the mirror collar.

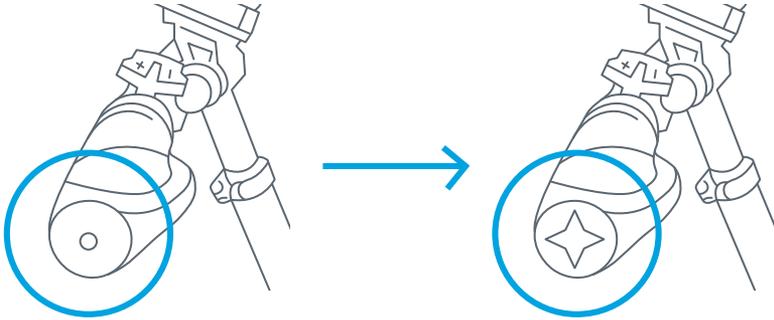


STEP 3

Use a flathead screwdriver to carefully remove the plug at the end of your handlebars.

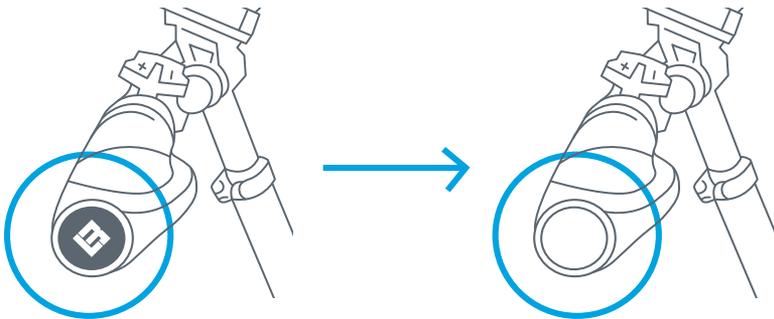


STEP 4

Next, you will insert the mirror collar into the opening.

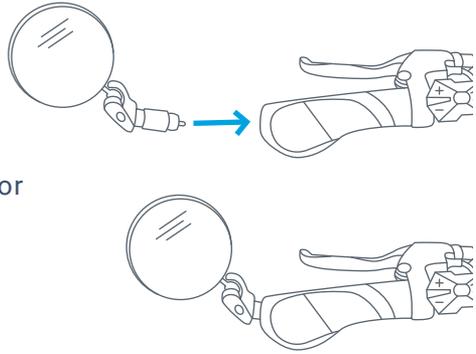

STEP 5

Using your 5mm hex wrench, tighten the screw to expand the collar grip. This secures the mirror within the handlebars.

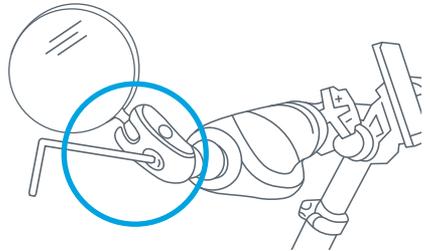

STEP 6

Once your mirrors are secure, adjust each mirror to the best position for YOU!

